


FORD TAURUS 1990-2004 VEHICLE WIRING

WIRING INFORMATION 1990 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	YELLOW	Ignition Harness
STARTER	WHITE/PINK	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/GREEN	Ignition Harness
POWER DOOR LOCK	PINK/YELLOW	In Larger Of Two Harnesses In Driver's Kick
POWER DOOR UNLOCK	PINK/GREEN	Panel Running To Rear Of Vehicle
Power door locks are negative trigger on vehic	les with OEM keyless entry, 5-wire reverse polari	ty on vehicles without OEM keyless entry.
PARKING LIGHTS (+)	BROWN	In Larger Of Two Harnesses In Driver's Kick Panel Running To Rear Of Vehicle
DOOR TRIGGER (+)	BLACK/BLUE	In Larger Of Two Harnesses In Driver's Kick Panel Or Behind Dimmer Switch
DOME SUPERVISION	USE DOOR TRIGGER	·
TRUNK RELEASE (+)	GRAY/RED	Trunk Release Switch
TACHOMETER	TAN/YELLOW	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	RED/LT. GREEN	In Smaller Of Two Harnesses In Driver's Kick Panel Running To Rear Of Vehicle
HORN TRIGGER (-)	YELLOW/LT. GREEN	In Gray Connector Right Of Steering Column
LEFT FRONT WINDOW UP	YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	
RIGHT FRONT WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	
LEFT REAR WINDOW UP	YELLOW/BLUE	
LEFT REAR WINDOW DOWN	RED/BLUE	
RIGHT REAR WINDOW UP	YELLOW/BLACK	
RIGHT REAR WINDOW DOWN	RED/BLACK	

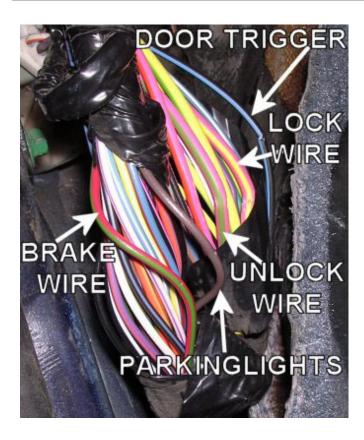





WIRING INFORMATION 1991 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	YELLOW	Ignition Harness
STARTER	WHITE/PINK	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/GREEN	Ignition Harness
POWER DOOR LOCK	PINK/YELLOW	In Larger Of Two Harnesses In Driver's Kick
POWER DOOR UNLOCK	PINK/GREEN	Panel Running To Rear Of Vehicle
Power door locks are negative trigger on vehicl	es with OEM keyless entry, 5-wire reverse polari	ty on vehicles without OEM keyless entry.
PARKING LIGHTS (+)	BROWN	In Larger Of Two Harnesses In Driver's Kick
		Panel Running To Rear Of Vehicle
DOOR TRIGGER (+)	BLACK/BLUE	In Larger Of Two Harnesses In Driver's Kick
		Panel Or Behind Dimmer Switch
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK RELEASE (+)	GRAY/RED	Trunk Release Switch
TACHOMETER	TAN/YELLOW	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	RED/LT. GREEN	In Smaller Of Two Harnesses In Driver's Kick
		Panel Running To Rear Of Vehicle
HORN TRIGGER (-)	YELLOW/LT. GREEN	In Gray Connector Right Of Steering Column
LEFT FRONT WINDOW UP	YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	
RIGHT FRONT WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	
LEFT REAR WINDOW UP	YELLOW/BLUE	
LEFT REAR WINDOW DOWN	RED/BLUE	
RIGHT REAR WINDOW UP	YELLOW/BLACK	
RIGHT REAR WINDOW DOWN	RED/BLACK	







WIRING INFORMATION 1992 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	YELLOW	Ignition Harness
STARTER	WHITE/PINK	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/GREEN	Ignition Harness
POWER DOOR LOCK	PINK/YELLOW	In Larger Of Two Harnesses In Driver's Kick
POWER DOOR UNLOCK	PINK/GREEN	Panel Running To Rear Of Vehicle
Power door locks are negative trigger on vehic	es with OEM keyless entry, 5-wire reverse polari	ty on vehicles without OEM keyless entry.
PARKING LIGHTS (+)	BROWN	In Larger Of Two Harnesses In Driver's Kick
		Panel Running To Rear Of Vehicle
DOOR TRIGGER (+)	BLACK/BLUE	In Larger Of Two Harnesses In Driver's Kick
		Panel Or Behind Dimmer Switch
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK RELEASE (+)	GRAY/RED	Trunk Release Switch
TACHOMETER	TAN/YELLOW	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	RED/LT. GREEN	In Smaller Of Two Harnesses In Driver's Kick
		Panel Running To Rear Of Vehicle
HORN TRIGGER (-)	YELLOW/LT. GREEN	In Gray Connector Right Of Steering Column
LEFT FRONT WINDOW UP	YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	
RIGHT FRONT WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	
LEFT REAR WINDOW UP	YELLOW/BLUE	
LEFT REAR WINDOW DOWN	RED/BLUE	
RIGHT REAR WINDOW UP	YELLOW/BLACK	
RIGHT REAR WINDOW DOWN	RED/BLACK	








WIRING INFORMATION 1993 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	YELLOW	Ignition Harness
STARTER	WHITE/PINK	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/GREEN	Ignition Harness
POWER DOOR LOCK	PINK/YELLOW	In Larger Of Two Harnesses In Driver's Kick
POWER DOOR UNLOCK	PINK/GREEN	Panel Running To Rear Of Vehicle
Power door locks are negative trigger on vehic	es with OEM keyless entry, 5-wire reverse polari	ty on vehicles without OEM keyless entry.
PARKING LIGHTS (+)	BROWN	In Larger Of Two Harnesses In Driver's Kick Panel Running To Rear Of Vehicle
DOOR TRIGGER (+)	BLACK/BLUE	In Larger Of Two Harnesses In Driver's Kick Panel Or Behind Dimmer Switch
DOME SUPERVISION	USE DOOR TRIGGER	·
TRUNK RELEASE (+)	GRAY/RED	Trunk Release Switch
TACHOMETER	TAN/YELLOW	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	RED/LT. GREEN	In Smaller Of Two Harnesses In Driver's Kick Panel Running To Rear Of Vehicle
HORN TRIGGER (-)	YELLOW/LT. GREEN	In Gray Connector Right Of Steering Column
LEFT FRONT WINDOW UP	YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	
RIGHT FRONT WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	
LEFT REAR WINDOW UP	YELLOW/BLUE	
LEFT REAR WINDOW DOWN	RED/BLUE	
RIGHT REAR WINDOW UP	YELLOW/BLACK	
RIGHT REAR WINDOW DOWN	RED/BLACK	

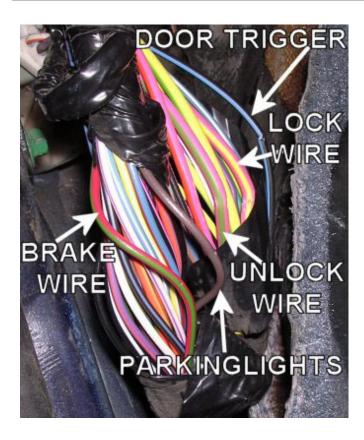





WIRING INFORMATION 1994 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	YELLOW	Ignition Harness
STARTER	WHITE/PINK	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/GREEN	Ignition Harness
POWER DOOR LOCK	PINK/YELLOW	In Larger Of Two Harnesses In Driver's Kick
POWER DOOR UNLOCK	PINK/GREEN	Panel Running To Rear Of Vehicle
Power door locks are negative trigger on vehic	es with OEM keyless entry, 5-wire reverse polari	ty on vehicles without OEM keyless entry.
PARKING LIGHTS (+)	BROWN	In Larger Of Two Harnesses In Driver's Kick
		Panel Running To Rear Of Vehicle
DOOR TRIGGER (+)	BLACK/BLUE	In Larger Of Two Harnesses In Driver's Kick
		Panel Or Behind Dimmer Switch
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK RELEASE (+)	GRAY/RED	Trunk Release Switch
TACHOMETER	TAN/YELLOW	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	RED/LT. GREEN	In Smaller Of Two Harnesses In Driver's Kick
		Panel Running To Rear Of Vehicle
HORN TRIGGER (-)	YELLOW/LT. GREEN	In Gray Connector Right Of Steering Column
LEFT FRONT WINDOW UP	YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	
RIGHT FRONT WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	
LEFT REAR WINDOW UP	YELLOW/BLUE	
LEFT REAR WINDOW DOWN	RED/BLUE	
RIGHT REAR WINDOW UP	YELLOW/BLACK	
RIGHT REAR WINDOW DOWN	RED/BLACK	







WIRING INFORMATION 1995 Ford Taurus

	WIRE LOCATION
	Ignition Harness
WHITE/PINK	Ignition Harness
RED/LT. GREEN	Ignition Harness
GRAY/YELLOW	Ignition Harness
BLACK/GREEN	Ignition Harness
PINK/YELLOW	In Larger Of Two Harnesses In Driver's Kick
PINK/GREEN	Panel Running To Rear Of Vehicle
es with OEM keyless entry, 5-wire reverse polari	ty on vehicles without OEM keyless entry.
BROWN	In Larger Of Two Harnesses In Driver's Kick
	Panel Running To Rear Of Vehicle
BLACK/BLUE	In Larger Of Two Harnesses In Driver's Kick
	Panel Or Behind Dimmer Switch
USE DOOR TRIGGER	
GRAY/RED	Trunk Release Switch
TAN/YELLOW	Ignition Coil Or Behind Instrument Cluster
RED/LT. GREEN	In Smaller Of Two Harnesses In Driver's Kick
	Panel Running To Rear Of Vehicle
YELLOW/LT. GREEN	In Gray Connector Right Of Steering Column
YELLOW	At Driver Window Motor Inside Door
RED	
YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RED/BLACK	
YELLOW/BLUE	
RED/BLUE	
YELLOW/BLACK	
RED/BLACK	
	GRAY/YELLOW BLACK/GREEN PINK/YELLOW PINK/GREEN es with OEM keyless entry, 5-wire reverse polari BROWN BLACK/BLUE USE DOOR TRIGGER GRAY/RED TAN/YELLOW RED/LT. GREEN YELLOW/LT. GREEN YELLOW/LT. GREEN YELLOW/BLACK RED/BLACK YELLOW/BLUE RED/BLUE YELLOW/BLACK









WIRING INFORMATION 1996 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	LT.GREEN/PURPLE or YELLOW	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRY/YEL & RED/BLK	Ignition Harness
SECOND ACCESSORY	BLACK/LT GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Left Connector Below Fuse Box Under Dash
POWER DOOR UNLOCK (-)	PINK/GREEN	Left Connector Below Fuse Box Under Dash
PARKING LIGHTS (+)	BROWN	Headlight Switch
DOOR TRIGGER (-)	GREEN/ORANGE	Headlight Switch
TRUNK TRIGGER (-)	BLACK/PINK	Light In Trunk
TRNK/HTCH RELEASE	PINK/YELLOW (-) or	At Trunk Release Switch
	GRAY/RED (+)	
FACTORY ALARM ARM	Arms with Lock	
FACTORY ALARM DISARM (-)	PINK/WHITE	Harness In Driver's Kick Panel Or Harness
		Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	YELLOW/WHITE	Ignition Coil Behind Air Intake Manifold
BRAKE WIRE (+)	RED/LT. GREEN	Brake Switch
HORN TRIGGER (-)	PURPLE/ORANGE DOTS	Gray Connector Right Of Column
LEFT FRONT WINDOW UP	BLACK/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	TAN/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
This vehicle may be equipped with PATS.	This must be bypassed when installing a remo	ote start system.

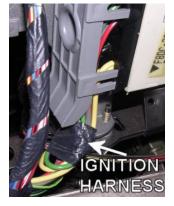






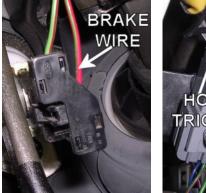





WIRING INFORMATION 1997 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	LT.GREEN/PURPLE or YELLOW	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRY/YEL & RED/BLK	Ignition Harness
SECOND ACCESSORY	BLACK/LT GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Left Connector Below Fuse Box Under Dash
POWER DOOR UNLOCK (-)	PINK/GREEN	Left Connector Below Fuse Box Under Dash
PARKING LIGHTS (+)	BROWN	Headlight Switch
DOOR TRIGGER (-)	GREEN/ORANGE	Headlight Switch
TRUNK TRIGGER (-)	BLACK/PINK	Light In Trunk
TRNK/HTCH RELEASE	PINK/YELLOW (-) or	At Trunk Release Switch
	GRAY/RED (+)	
FACTORY ALARM ARM	Arms with Lock	
FACTORY ALARM DISARM (-)	PINK/WHITE	Harness In Driver's Kick Panel Or Harness
		Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	YELLOW/WHITE	Ignition Coil Behind Air Intake Manifold
BRAKE WIRE (+)	RED/LT. GREEN	Brake Switch
HORN TRIGGER (-)	PURPLE/ORANGE DOTS	Gray Connector Right Of Column
LEFT FRONT WINDOW UP	BLACK/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	TAN/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
This vehicle may be equipped with PATS.	This must be bypassed when installing a remo	ote start system.

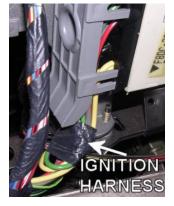

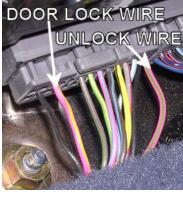




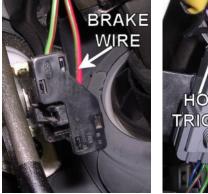




WIRING INFORMATION 1998 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	LT.GREEN/PURPLE or YELLOW	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRY/YEL & RED/BLK	Ignition Harness
SECOND ACCESSORY	BLACK/LT GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Left Connector Below Fuse Box Under Dash
POWER DOOR UNLOCK (-)	PINK/GREEN	Left Connector Below Fuse Box Under Dash
PARKING LIGHTS (+)	BROWN	Headlight Switch
DOOR TRIGGER (-)	GREEN/ORANGE	Headlight Switch
TRUNK TRIGGER (-)	BLACK/PINK	Light In Trunk
TRNK/HTCH RELEASE	PINK/YELLOW (-) or	At Trunk Release Switch
	GRAY/RED (+)	
FACTORY ALARM ARM	Arms with Lock	
FACTORY ALARM DISARM (-)	PINK/WHITE	Harness In Driver's Kick Panel Or Harness
		Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	YELLOW/WHITE	Ignition Coil Behind Air Intake Manifold
BRAKE WIRE (+)	RED/LT. GREEN	Brake Switch
HORN TRIGGER (-)	PURPLE/ORANGE DOTS	Gray Connector Right Of Column
LEFT FRONT WINDOW UP	BLACK/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	TAN/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
This vehicle may be equipped with PATS.	This must be bypassed when installing a remo	te start system.

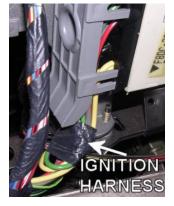






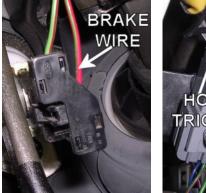




WIRING INFORMATION 1999 Ford Taurus

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	LT.GREEN/PURPLE or YELLOW	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRY/YEL & RED/BLK	Ignition Harness
SECOND ACCESSORY	BLACK/LT GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Left Connector Below Fuse Box Under Dash
POWER DOOR UNLOCK (-)	PINK/GREEN	Left Connector Below Fuse Box Under Dash
PARKING LIGHTS (+)	BROWN	Headlight Switch
DOOR TRIGGER (-)	GREEN/ORANGE	Headlight Switch
TRUNK TRIGGER (-)	BLACK/PINK	Light In Trunk
TRNK/HTCH RELEASE	PINK/YELLOW (-) or	At Trunk Release Switch
	GRAY/RED (+)	
FACTORY ALARM ARM	Arms with Lock	
FACTORY ALARM DISARM (-)	PINK/WHITE	Harness In Driver's Kick Panel Or Harness
		Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	YELLOW/WHITE	Ignition Coil Behind Air Intake Manifold
BRAKE WIRE (+)	RED/LT. GREEN	Brake Switch
HORN TRIGGER (-)	PURPLE/ORANGE DOTS	Gray Connector Right Of Column
LEFT FRONT WINDOW UP	BLACK/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	TAN/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
This vehicle may be equipped with PATS. 1	This must be bypassed when installing a remo	te start system

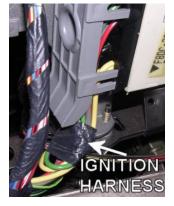





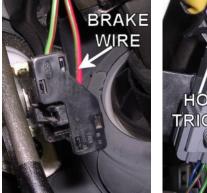



WIRING INFORMATION: 2000 Ford Taurus		
WIRE	WIRE COLOR	WIRE LOCATION
12V	LT. GREEN/PURPLE	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/LT. GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Module Left Of Steering Column
POWER UNLOCK (-)	PINK/ LT. GREEN	Module Left Of Steering Column
PARKING LIGHTS (+)	BROWN	Headlight Switch
DOOR TRIGGER (-)	BLACK/ORANGE	Module Left Steering Column- Must Cut The
		Wire And Install A Diode Inline To Avoid
		Falsing Problems.
Can also use individual negative door trigger	wires. They are: YELLOW/BLACK (left front doo	r), GRAY/RED (right front door),
LT.GREEN/YELLOW (left rear door), and PIN		
DOME SUPERVISION	BLACK/LT. BLUE	Harness On Top Of Fuse Box
TRUNK TRIGGER (-)	BLACK/PINK (sedans)	Trunk Trigger Wire Is Found At Light In Trunk
	WHITE/PURPLE (wagons)	For Sedans And At Module To The Left Of The
		Steering Column For Wagons.
HOOD PIN (-)	TAN/LT. GREEN	Module Left Of Steering Column
TRUNK RELEASE	PURPLE/YELLOW (-)	Use PURPLE/YELLOW For Vehicles With
	GRAY/RED (+)	OEM Keyless And GRAY/RED For Vehicles
	YELLOW/LT.GREEN (-)	Without OEM Keyless And
		YELLOW/LT.GREEN To Unlock Only The
		Rear Hatch For Wagons
FACTRY ALARM DISARM (-)	PINK/WHITE	Module Left Of Steering Column
TACHOMETER WIRE	TAN/YELLOW	Module On Passenger Side Of Inner Fender Well
BRAKE WIRE (+)	RED/LT. GREEN	Harness In Driver's Kick Panel Or Brake Pedal
		Switch
HORN TRIGGER (-)	PURPLE OR BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
This vehicle may be equipped with PATS. The	nis must be bypassed when installing a remote sta	rt system.

WIRING INFORMATION: 2001	Ford Taurus
--------------------------	-------------

WIRING INFORMATION: 2001 Ford Tauru WIRE	WIRE COLOR	WIRE LOCATION
12V	LT. GREEN/PURPLE	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/LT. GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Module Left Of Steering Column
POWER UNLOCK (-)	PINK/ TELEOW PINK/ LT. GREEN	Module Left Of Steering Column
	-	v
PARKING LIGHTS (+)	BROWN	Headlight Switch
DOOR TRIGGER (-)	BLACK/ORANGE	Module Left Steering Column- Must Cut The
		Wire And Install A Diode Inline To Avoid
		Falsing Problems.
Can also use individual negative door trigg	er wires. They are: YELLOW/BLACK (left fi	ront door), GRAY/RED (right front door),
LT.GREEN/YELLOW (left rear door), and F		
	BLACK/LT. BLUE	Harness On Top Of Fuse Box
TRUNK TRIGGER (-)	BLACK/PINK (sedans)	Trunk Trigger Wire Is Found At Light In Trunk
	WHITE/PURPLE (wagons)	For Sedans And At Module To The Left Of The
		Steering Column For Wagons.
HOOD PIN (-)	TAN/LT. GREEN	Module Left Of Steering Column
TRUNK RELEASE	PURPLE/YELLOW (-)	Use PURPLE/YELLOW For Vehicles With
	GRAY/RED (+)	OEM Keyless And GRAY/RED For Vehicles
	YELLOW/LT.GREEN (-)	Without OEM Keyless And
		YELLOW/LT.GREEN To Unlock Only The
		Rear Hatch For Wagons
FACTRY ALARM DISARM (-)	PINK/WHITE	Module Left Of Steering Column
TACHOMETER WIRE	TAN/YELLOW	Module On Passenger Side Of Inner Fender Well
BRAKE WIRE (+)	RED/LT. GREEN	Harness In Driver's Kick Panel Or Brake Pedal
	-	Switch
HORN TRIGGER (-)	PURPLE OR BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
	This must be bypassed when installing a rer	
The tensie may be equipped with ATO.	The meet be bypassed when motaling a fer	

WIRING INFORMATION: 2002 Ford Taurus		
WIRE	WIRE COLOR	WIRE LOCATION
12V	LT. GREEN/PURPLE	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/LT. GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Module Left Of Steering Column
POWER UNLOCK (-)	PINK/ LT. GREEN	Module Left Of Steering Column
PARKING LIGHTS (+)	BROWN	Headlight Switch
DOOR TRIGGER (-)	BLACK/ORANGE	Module Left Steering Column- Must Cut The
		Wire And Install A Diode Inline To Avoid
		Falsing Problems.
Can also use individual negative door trigger v	vires. They are: YELLOW/BLACK (left front door	r), GRAY/RED (right front door),
LT.GREEN/YELLOW (left rear door), and PIN		
DOME SUPERVISION	BLACK/LT. BLUE	Harness On Top Of Fuse Box
TRUNK TRIGGER (-)	BLACK/PINK (sedans)	Trunk Trigger Wire Is Found At Light In Trunk
	WHITE/PURPLE (wagons)	For Sedans And At Module To The Left Of The
		Steering Column For Wagons.
HOOD PIN (-)	TAN/LT. GREEN	Module Left Of Steering Column
TRUNK RELEASE	PURPLE/YELLOW (-)	Use PURPLE/YELLOW For Vehicles With
	GRAY/RED (+)	OEM Keyless And GRAY/RED For Vehicles
	YELLOW/LT.GREEN (-)	Without OEM Keyless And
		YELLOW/LT.GREEN To Unlock Only The
		Rear Hatch For Wagons
FACTRY ALARM DISARM (-)	PINK/WHITE	Module Left Of Steering Column
TACHOMETER WIRE	TAN/YELLOW	Module On Passenger Side Of Inner Fender Well
BRAKE WIRE (+)	RED/LT. GREEN	Harness In Driver's Kick Panel Or Brake Pedal
		Switch
HORN TRIGGER (-)	PURPLE OR BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
This vehicle may be equipped with PATS. The	s must be bypassed when installing a remote sta	rt system.

WIRING INFORMATION: 2003 Ford Taurus	WIRE COLOR	WIRE LOCATION
12V	LT. GREEN/PURPLE	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/LT. GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Module Left Of Steering Column
POWER UNLOCK (-)	PINK/ LT. GREEN	Module Left Of Steering Column
PARKING LIGHTS (+)	BROWN	Headlight Switch
DOOR TRIGGER (-)	BLACK/ORANGE	Module Left Steering Column- Must Cut The
DOOR TRIBBER (-)	BLACIVORANGE	Wire And Install A Diode Inline To Avoid
		Falsing Problems.
Can also use individual negative door trigger v	⊥ vires. They are: YELLOW/BLACK (left front door	
LT.GREEN/YELLOW (left rear door), and PINI	K/LT, BLUE (right rear door).	
DOME SUPERVISION	BLACK/LT. BLUE	Harness On Top Of Fuse Box
TRUNK TRIGGER (-)	BLACK/PINK (sedans)	Trunk Trigger Wire Is Found At Light In Trunk
	WHITE/PURPLE (wagons)	For Sedans And At Module To The Left Of The
		Steering Column For Wagons.
HOOD PIN (-)	TAN/LT. GREEN	Module Left Of Steering Column
TRUNK RELÉASE	PURPLE/YELLOW (-)	Use PURPLE/YELLOW For Vehicles With
	GRAY/RED (+)	OEM Keyless And GRAY/RED For Vehicles
	YELLOW/LT.GREEN (-)	Without OEM Keyless And
		YELLOW/LT.GREEN To Unlock Only The
		Rear Hatch For Wagons
FACTRY ALARM DISARM (-)	PINK/WHITE	Module Left Of Steering Column
TACHOMETER WIRE	TAN/YELLOW	Module On Passenger Side Of Inner Fender
		Well
BRAKE WIRE (+)	RED/LT. GREEN	Harness In Driver's Kick Panel Or Brake Pedal
		Switch
HORN TRIGGER (-)	PURPLE OR BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK s must be bypassed when installing a remote sta	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 2004 Ford Taurus

WIRING INFORMATION: 2004 Ford Taurus		
WIRE	WIRE COLOR	WIRE LOCATION
12V	LT. GREEN/PURPLE	Ignition Harness
STARTER	RED/LT. BLUE	Ignition Harness
IGNITION	RED/LT. GREEN	Ignition Harness
ACCESSORY	GRAY/YELLOW	Ignition Harness
SECOND ACCESSORY	BLACK/LT. GREEN	Ignition Harness
POWER DOOR LOCK (-)	PINK/YELLOW	Module Left Of Steering Column
POWER UNLOCK (-)	PINK/ LT. GREEN	Module Left Of Steering Column
PARKING LIGHTS (+)	BROWN	Headlight Switch
LEFT FRONT DOOR TRIGGER (-)	YELLOW/BLACK	Module Left Of Steering Column
RIGHT FRONT DOOR TRIGGER (-)	GRAY/RED	Module Left Of Steering Column
LEFT REAR DOOR TRIGGER (-)	LT.GREEN/YELLOW	Module Left Of Steering Column
RIGHT REAR DOOR TRIGGER (-)	PNK/LT.BLUE	Module Left Of Steering Column
DOME SUPERVISION (+)	BLACK/LT. BLUE	Module Left Of Steering Column
TRUNK TRIGGER (-)	BLACK/PINK (sedans)	Trunk Trigger Wire Is Found At Light In Trunk
	WHITE/PURPLE (wagons)	For Sedans And At Module To The Left Of The
		Steering Column For Wagons.
HOOD PIN (-)	TAN/LT. GREEN	Module Left Of Steering Column
TRUNK RELEASE (-)	PURPLE/YELLOW	Module Left Of Steering Column
FACTORY ALARM DISARM (-)	PINK/WHITE	Module Left Of Steering Column
TACHOMETER WIRE	NOT RED	Ignition Coil
BRAKE WIRE (+)	RED/LT. GREEN	Harness In Driver's Kick Panel Or Brake Pedal
		Switch
HORN TRIGGER (-)	PURPLE OR BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
This vehicle may be equipped with PATS. This must be bypassed when installing a remote start system.		